

# — TYPE Y-2 —

This cancels Type No. F-114  
8-10-05 S.E.


## KEY SIDING STATION

SCALES { LONGITUDINAL 100 TO 1 INCH.  
TRANSVERSE 50 TO 1 INCH.

N. R. H. Q. E. PLAN No 743

### NOTE:-

TWO KEYS ARE PROVIDED MARKED S.M.'S KEY AND POINTS KEY.  
IN NORMAL POSITION AS SHOWN, POINTS KEY IS LOCKED IN LOCK ON POINT INDICATOR POST AND S.M.'S KEY IS IN POSSESSION OF STATION MASTER AT ADJACENT STATION.  
TO WORK POINTS TAKE S.M.'S KEY, INSERT IT IN LOCK ON POINT INDICATOR POST, THEREBY RELEASING BOTH POINT INDICATOR ARMS, THE ARMS ARE THEN PLACED TO DANGER BY MEANS OF HAND LEVER. POINTS KEY CAN THEN BE EXTRACTED LOCKING BOTH ARMS AT DANGER, IT IS THEN INSERTED IN LOCK AT POINTS—THIS UNLOCKS THE POINTS—POINTS KEY CAN ONLY BE EXTRACTED FROM POINTS LOCK WHEN POINTS ARE SET FOR STRAIGHT, AND IN BEING EXTRACTED LOCKS THE POINTS FOR THE STRAIGHT.

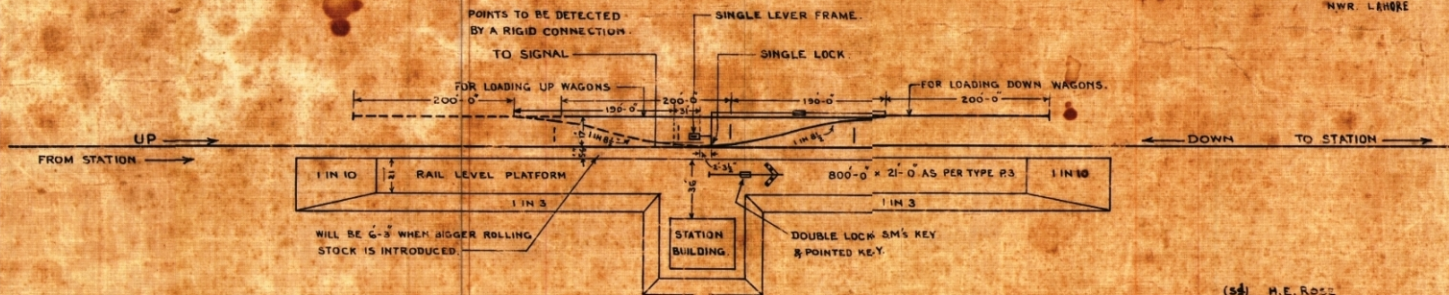

(Sd)   
 D/- 24-5-28  
CHIEF ENGINEER  
N.W.R. LAHORE

(Sd) C. WATSON  
D/- 28-8-28  
CHIEF OPERATING SUPERINTENDENT  
N.W.R. LAHORE

(Sd) H.E. ROSS  
D/- 11-5-28  
SIGNAL ENGINEER  
N.W.R. LAHORE